

OPERATOR'S MANUAL / SALES AND ENGINEERING DATA

INCLUDING: SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, TROUBLESHOOTING.
INCLUDE MANUALS: AF0860-XX Air Motor (pn 97999-1472), 66236-XXX-B Lower Pump End (pn 97999-489)
and S-632 General Information Manual (pn 97999-624).

RELEASED: 10-1-10
REVISED: 2-24-17
(REV: C)

8" AIR MOTOR
13:1 RATIO
6" STROKE

AF0813SXXXXXX-XX-X EXTRUSION PUMP SERIES

Carbon Steel



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,
OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

- Use only genuine ARO® replacement parts to assure compatible pressure rating and longest service life.
- **637489** for repair of Air Motor section.
- **637128-XX4-B** for repair of Lower Pump section. Refer to the chart on page 2 for description of -XX4-B options.

SPECIFICATIONS


Model Series (refer to option chart)	AF0813SXXXXXX-XX-X
Pump Type	Air Operated, Extrusion Double Acting Pump
Ratio	13:1
Air Motor	AF0860-XX
Motor Repair Kit	637489
Motor Diameter	8" (20.3 cm)
Stroke (double acting)	6" (15.2 cm)
Air Inlet (female)	3/4 - 14 NPTF - 1
Air Exhaust (female)	1-1/4 - 11-1/2 NPTF - 1
Lower Pump End Series	66236-XXX-B
Lower Pump Repair Kit	637128-XX4-B
Material Outlet (female)	1-1/2 - 11-1/2 NPTF - 1
Weight	125.5 lbs (56.9 kgs)

PUMP PERFORMANCE

Air Inlet Pressure Range	30 - 120 psi (2.1 - 8.3 bar)
Fluid Pressure Range	390 - 1900 psi (26.9 - 131.0 bar)
Maximum Rec'd Cycles / Minute	70
Displacement Per Cycle	40.4 In ³ (662.0 cc)
Cycles Per Gallon	5.7
Flow @ 70 Cycles / Minute	12.2 gpm (46.3 lpm)
Noise Level @ 60 psi - 40 cpm	89.8 db(A)①

① The pump sound pressure level has been updated to an Equivalent Continuous Sound Level (LAeq) to meet the intent of ANSI S1.13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

PUMP DATA

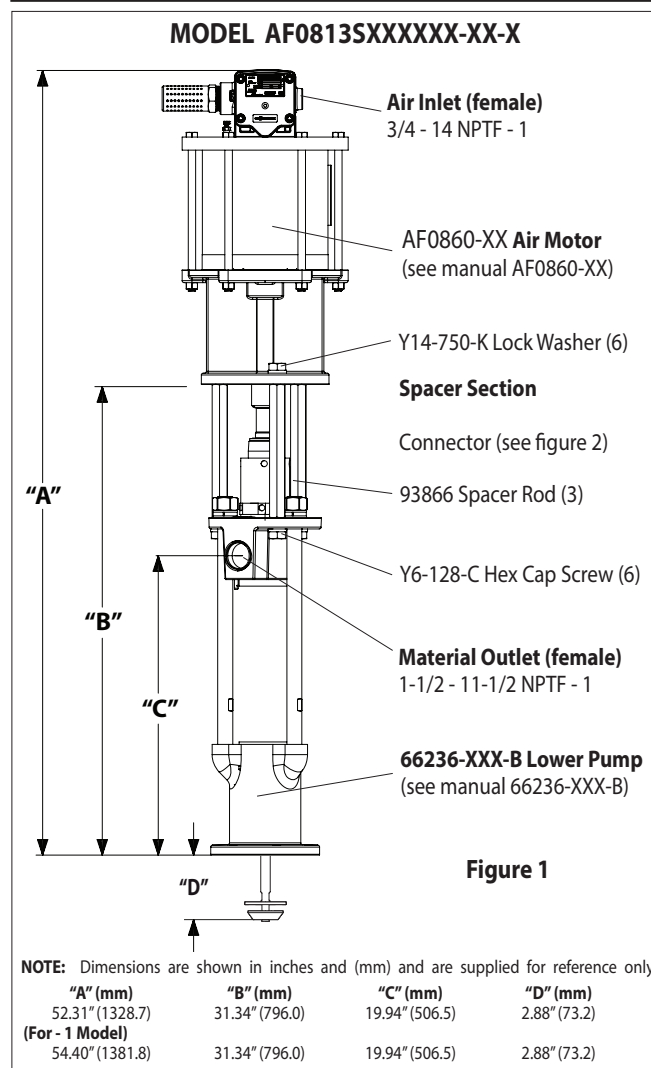

IMPORTANT

This is one of four documents which support the pump. Replacement copies of these forms are available upon request.

- ☒ **AF0813SXXXXXX-XX-X** Model Operator's Manual (pn 97999-1515)
- ☐ **S-632** General Information - Industrial Piston Pumps (pn 97999-624)
- ☐ **66236-XXX-B** Lower Pump End Operator's Manual (pn 97999-489)
- ☐ **AF0860-XX** Air Motor Operator's Manual (pn 97999-1472)

INGERSOLL RAND COMPANY LTD

209 NORTH MAIN STREET – BRYAN, OHIO 43506

① (800) 495-0276 • FAX (800) 892-6276

© 2017

CCN 15334048

arozone.com

ARO

IR Ingersoll Rand

PUMP OPTION DESCRIPTION CHART

Packing Material	Pump Model	Lower Pump End	Lower End Repair Kit	
	AF0813S11XXXX-X Air Motor Option Plunger Type Spring Type Lower Packing Material Upper Packing Material Spring Type Packing Material Spring Type Packing Material	66236-XXE-B Spring Type Packing Material	637128-XX4-B Spring Type Packing Material	
	Glass filled PTFE (upper) Glass filled PTFE (lower)	KK	3	3
	UHMW-PE (upper) UHMW-PE (lower)	FF	C	C
	UHMW-PE / Leather Staggered (upper) UHMW-PE (lower)	HF	F	F
	Polyurethane (upper) UHMW-PE (lower)	PF	J	J
	UHMW-PE / Glass filled PTFE Staggered (upper) UHMW-PE (lower)	GF	P	P
Glass filled PTFE / UHMW-PE Staggered (upper) Glass filled PTFE (lower)	RK	R	R	

Spring Type

No Spring	1	3	3
Multiple Wave Spring	4	4	4
No Spring with Alternate Solvent Cup	A	8	3
Multiple Wave Spring with Alternate Solvent Cup	D	9	4


Plunger Type

Carbon steel with Hard Chrome Plating	4	E	4
---------------------------------------	---	---	---

Air Motor Option

No Option		N/A	N/A
Intergrated Ball Valve Regulator	1	N/A	N/A

DIMENSIONS

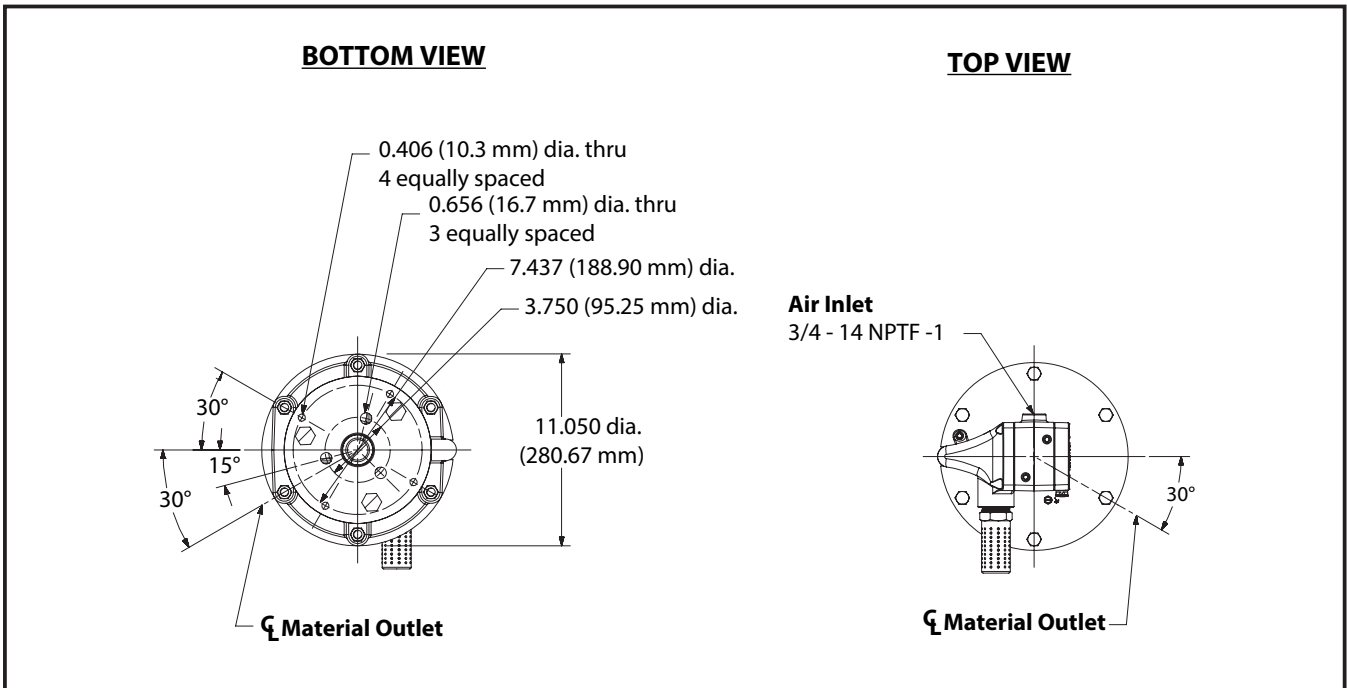

GENERAL DESCRIPTION

- The chop-check pumps are primarily designed for the pumping of heavy viscous material with or without fibrous content. The models can be used with a gravity feed single post lift as a topper type assembly or with a two post lift as a force feed type assembly. The lower pump is designed for easy priming and the double acting feature is standard in all ARO industrial pumps. Material is delivered to the pump discharge outlet on both the up and down stroke.
- The motor is connected to the lower pump end by a spacer section. This allows for lubrication of the upper packing gland and prevents motor contamination because of normal wear and eventual leakage through the material packing gland. Be sure the solvent cup is adequately filled with lubricant to protect the upper packings and insure longest service life.

⚠ WARNING HAZARDOUS PRESSURE. Do not exceed maximum operating pressure of 1900 psi (131.0 bar) at 120 psi (8.3 bar) inlet air pressure.

Pump Ratio X Inlet Pressure to Pump Motor = Maximum Pump Fluid Pressure

Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 150 psi (10.3 bar) inlet pressure is supplied to the motor of a 4:1 ratio pump, it will develop a maximum of 600 psi (41.4 bar) fluid pressure (at no flow) - as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.

⚠ WARNING Refer to general information sheet for additional safety precautions and important information.

NOTICE: Thermal expansion can occur when the fluid in the material lines is exposed to elevated temperatures. Example: Material lines located in a non-insulated roof area can warm due to sunlight. Install a pressure relief valve in the pumping system.

Replacement warning label (pn 92325) is available upon request.

TROUBLE SHOOTING

Pump problems can occur in either the air motor section or the lower pump end section. Use these basic guidelines to help determine which section is affected.

Pump will not cycle.

- Be certain to first check for non-pump problems including kinked, restrictive or plugged inlet / outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet / outlet material lines.
- Refer to the motor manual for trouble shooting if the pump does not cycle and / or air leaks from the air motor.
- Damaged motor. Service the motor.

Pump cycles but does not deliver material.

- Refer to the lower pump end manual for further trouble shooting.

PUMP CONNECTION - UPPER / LOWER

NOTE: All threads are right hand.

1. Lay the pump assembly on a work bench.
2. Remove the three (Y6-128-C) cap screws and (Y14-750-K) lock washers from the three (93866) spacer rods (see figure 1).
3. Pull the air motor from the lower pump end until the motor piston rod is in the "down" position and the lower pump end rod is in the "up" position.
4. Remove the three spacer rods by removing the three (Y6-128-C) cap screws and (Y14-750-K) lock washers.
5. Using e-ring pliers, slide the (95069) "e" ring up far enough to allow the sleeve to move upward and release the two connectors (see figure 2). Lay the air motor aside.

PUMP CONNECTION DETAIL

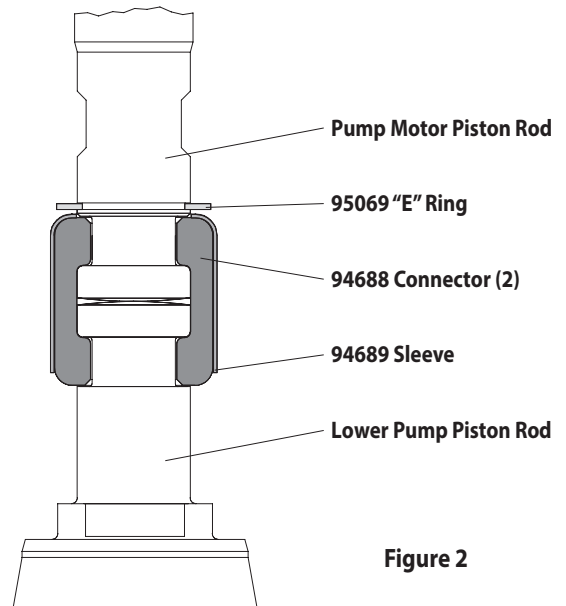


Figure 2


REASSEMBLY

1. Align the pump motor with the lower pump end. Position the air inlet of the motor 120° from the material outlet.
2. Install the two (94688) connectors and retain with the (94689) sleeve. Slide the (95069) "e" ring back into position.
3. Assemble the three (93866) spacer rods to the lower pump and secure using three (Y14-750-K) lock washers and (Y6-128-C) cap screws.
4. Reinstall the spacer rods to the pump motor.
5. Bring the motor and lower pump together and retain with three (Y14-750-K) lock washers and (Y6-128-C) cap screws.

PERFORMANCE CURVES

PERFORMANCE BASED ON 30wt. OIL (100cSt) AT 40°C TEMPERATURE


CYCLE PER MINUTE (CPM)

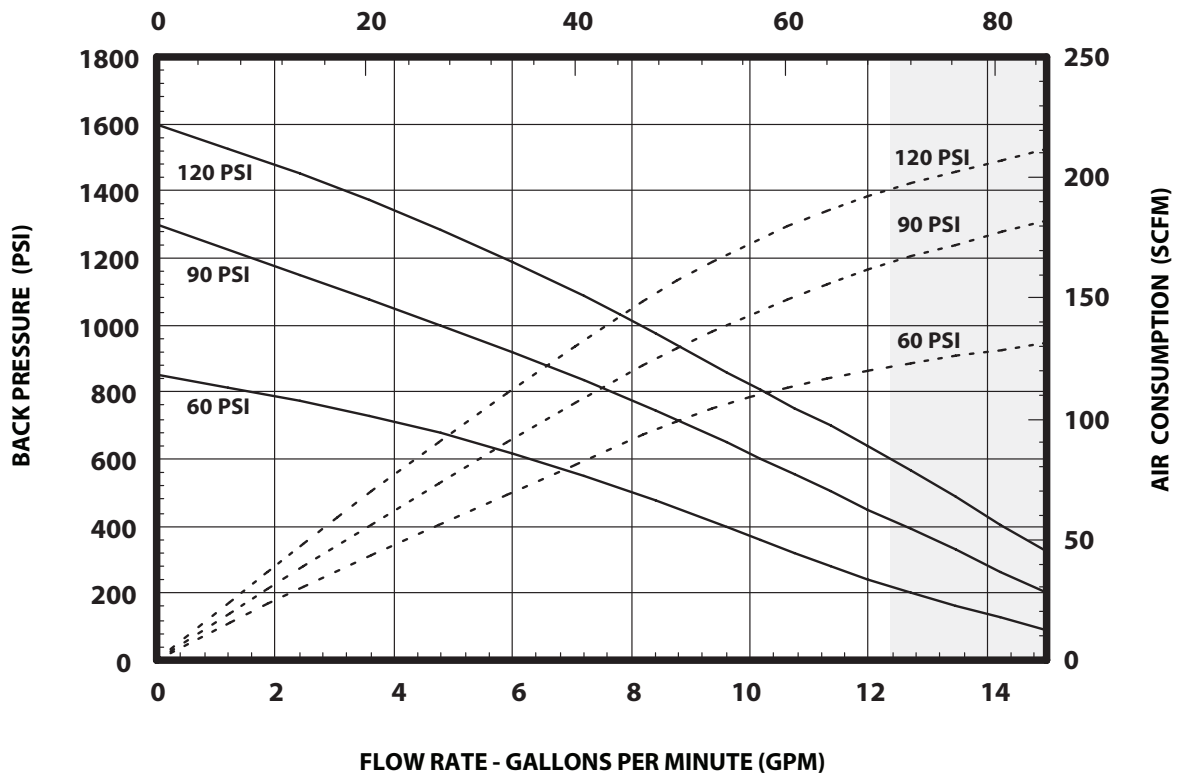

NOTE: NON SHADED AREA OF THE GRAPH REPRESENTS RECOMMENDED OPERATING RANGE

PERFORMANCE BASED ON 30wt. OIL (100cSt) AT 40°C TEMPERATURE

CYCLE PER MINUTE (CPM)

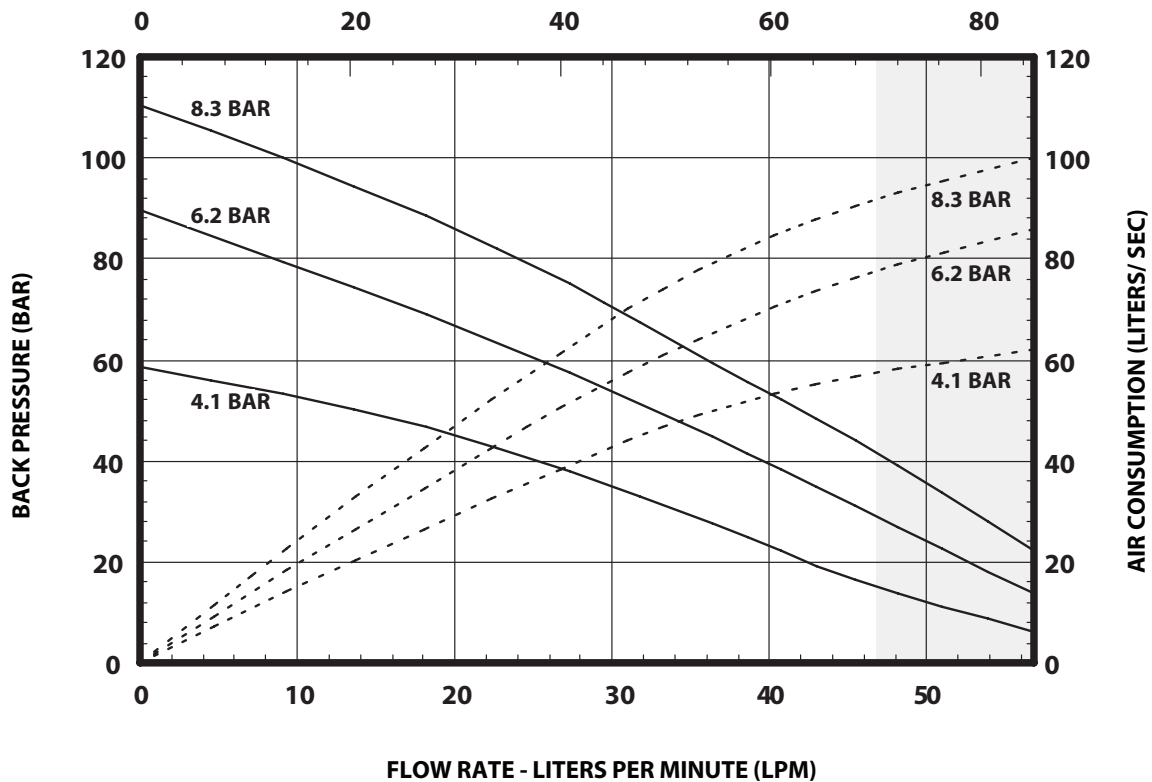

NOTE: NON SHADED AREA OF THE GRAPH REPRESENTS RECOMMENDED OPERATING RANGE